## CSE 3461 Lab 3

Instructor: Adam C. Champion
Due: Tuesday, October 20, 2015, 11:59 p.m. (40 points)

Write a file transfer application using UDP sockets in Python. The file transfer protocol includes a server called ftps.py and a client called ftpc.py. In the following, we assume the client is running on beta.cse.ohio-state.edu and the server is running on gamma.cse.ohio-state.edu.

First, start the server on gamma.cse.ohio-state.edu using the command

```
python ftps.py <local-port-on-gamma>
```

Then, start troll on beta.cse.ohio-state.edu with the command (on one line)

Next, start ftpc.py on beta.cse.ohio-state.edu with the command (on one line)


The ftpc.py client will send all bytes of the local file to the troll process, which should forward the packets to ftps.py. The ftps.py server should receive the file and then store it. Make sure that the new file created by ftps.py is in a different directory to avoid overwriting the original file, since all the CSE machines have your root directory mounted.

The file transfer application will use a simple protocol. The payload of each UDP segment will contain the remote IP (4 bytes), remote port (2 bytes), and a flag (1 byte), followed by a data/control field as explained below. The flag takes 3 possible values depending on the data/control field:

- **First segment (4 bytes):** The first segment should contain the number of bytes in the file to follow (in network byte order). The flag is set to a value of 1.
- Second segment (20 bytes): The second segment should contain 20 bytes which is the name of the file (assume the name can fit in 20 bytes). The flag is set to a value of 2.
- Other segments: The other segments will contain data bytes from the file to be transferred. Each segment can have up to 1,000 data bytes. The flag is set to a value of 3.

The troll process will drop packets with a drop rate percentage as indicated in the command line. With a drop rate of 0, the file should be delivered intact to ftps.py. Submit well-documented code using the following command:

submit c3461ae lab3 <code-directory-name>

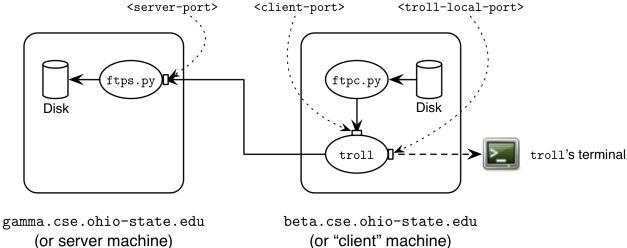

No buffer, array, or data structure should exceed 1,000 bytes. You'll need to "chunk" the file into "pieces," each of which is at most 1,000 bytes. Submit a README.txt file with your lab. Your program should work for *binary* files (images, etc.) of arbitrary size and the client and server should be running on different machines on stdlinux. You can use the sample images on the course webpage to test your program. Use diff or md5sum at the command line to ensure that the transferred file is bitwise identical to the original one. To avoid overrunning UDP buffers, you can call sleep() for a short time between sending packets.

<sup>&</sup>lt;sup>1</sup>In your lab, you can substitute any machine on stdlinux (e.g., zeta.cse.ohio-state.edu or epsilon.cse.ohio-state.edu) for beta.cse.ohio-state.edu and gamma.cse.ohio-state.edu, respectively. You should do so to avoid "overloading" these machines.